

# BESTip ATA 10D Quick Start Manual

Revised date : 8/31/2005


## Requirements:

Before making any Internet call from your BESTip ATA, you need the following items:

1. A Touch-tone phone set.
2. A 110/220V AC electrical outlet.
3. A dial-up Internet account – ISP phone number, user login ID and password.
4. An analog phone line

## Connection:

Please refer to the diagram below for the typical connection.

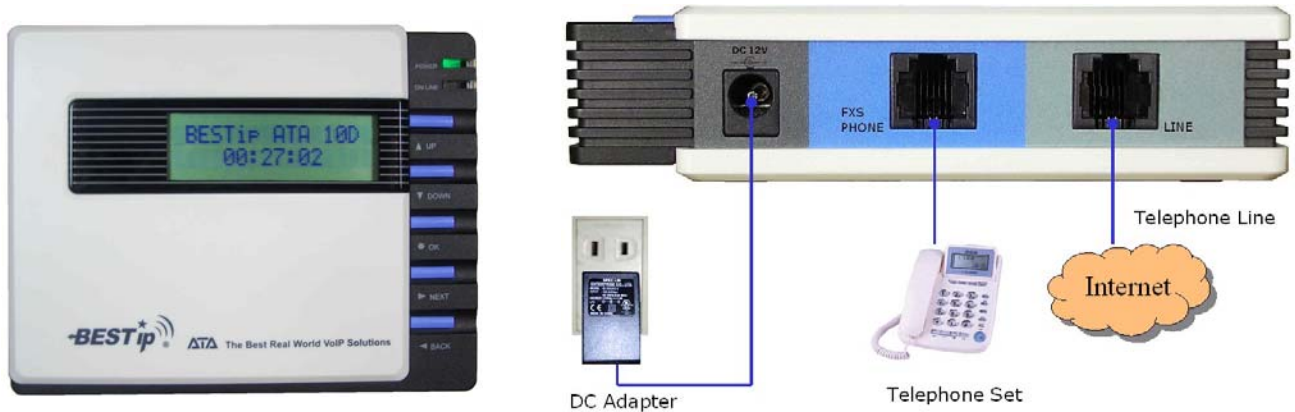


## Buttons & Phone Keypad

Before making phone call, you must enter your Internet information with your touch-tone telephone keypad and BESTip's buttons.

Refer to the Typical Phone Keypad and Character Set below to enter characters.

### Typical Phone Keypad and Character Set

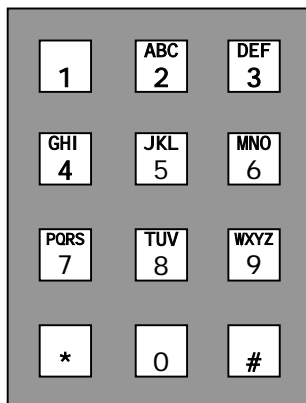

KEY PAD	Character Set
1	1 - =!#\$%^&_+!<>?;'/
2	2 abcABC
3	3 defDEF
4	4 ghiGHI
5	5 jklJKL
6	6 mnoMNO
7	7 pqrsPQRS
8	8 tuvTUV
9	9 wxyzWXYZ
0	0 .@ "space"
*	.
#	#

## How to enter or change setting

Use the buttons in the front panel for menu function navigation. Go to the option you want to setup. Then follow steps described below to enter or change the setting,

 
1. Press  one time, the title will start flashing. You may enter new setting from phone keypad now.
2. Press  button again. The title will stop flashing. The new value has been store in memory temporarily. You may go to the next setting.
3. After all the settings has been setup, please press  one or two times until the screen displays "Update Setup". All the setting will be saved permanently.

Please refer to instructions in the next page for "Quick Setting" operation.

# Setup Quick Configuration


1

Press **▼ DOWN** button to enter **Quick Setting**.




2

 Press **▼ DOWN** button to enter **PBX Dial Prefix**. Enter code the access trunk if the device is connected with PBX.



3

 Press **▼ DOWN** button to enter **ISP Phone**. Enter ISP phone number.



4

Press **▼ DOWN** button to enter **ISP Login Name**. Enter ISP Login Name.



 
5

Press **▼ DOWN** button to enter **ISP Password**. Enter ISP Password.




6

Press **▼ DOWN** button to enter **ISP PPP Type**. Choose ISP PPP Type using **▶ NEXT** or **◀ BACK**, use "Type 1" normally.




7

 Press **▼ DOWN** button to enter **ISP Idle Timeout**. Choose ISP Idle Timeout using **▶ NEXT** or **◀ BACK**, "0" is no idle timeout.




8

 Press **▼ DOWN** button to enter **Primary DNS**. Enter DNS IP address. You may leave it blank.




9

 Press **▼ DOWN** button to enter **Secondary DNS**. Enter DNS IP address. You may leave it blank.




10

 Press **▼ DOWN** button to enter **Country Code**. Enter telephone country code, "886" for example.




11

 Press **▼ DOWN** button to enter **Area Code**. Enter telephone area code, "2" for example.




12

 Press **▼ DOWN** button to enter **IDD Prefix**. Enter IDD prefix code when dial international call, "00" for example.




13

 Press **▼ DOWN** button to enter **DDD Prefix**. Enter DDD prefix code when dial domestic and local Call, "0" for example.




14

 Press **▼ DOWN** button to back to the beginning of **Quick Setting**.




15

 Press **▲ UP** button to save configuration data in memory.



16

 It will display the standby screen again after the configuration data has been saved.



# Start Making VoIP Call

Press **▲ UP** button to make the device start dial to ISP.



It will display the ITSP balance and "Ready for dial" after the device is connect to Internet. You can pick up the phone And dial Internet phone call now.

