

BESTip ATA 10L Quick Start Manual


Requirements:

Before making any call from your BESTip ATA, you need the following items:

1. A Touch-tone phone set.
2. A 110/220V AC electrical outlet.
3. A valid Internet connection.

Connection:


Please refer to the diagram below for the typical connection.

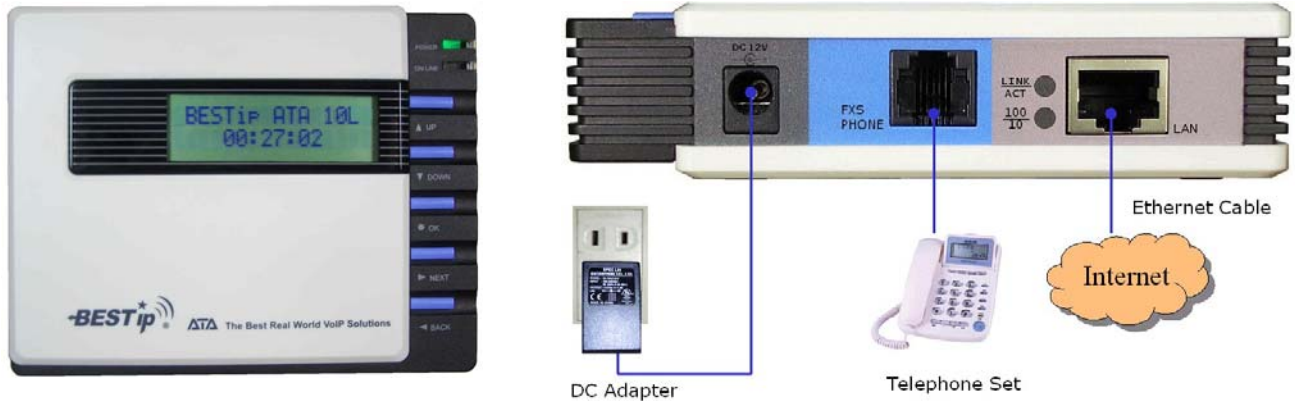

Buttons & Phone Keypad

Before making phone call, you must configure and connect ATA 10L properly. Please enter your Internet information with your touch-tone telephone keypad and BESTip's buttons. Refer to the Typical Phone Keypad and Character Set below to enter characters.

Typical Phone Keypad and Character Set

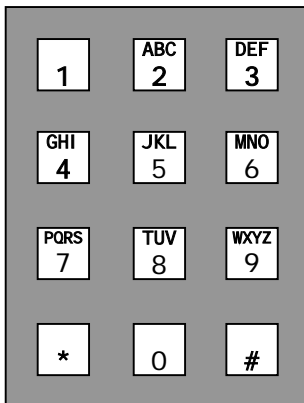

KEY PAD	Character Set
1	1 - !#\$%&_+:"<>? \ /
2	2 abcABC
3	3 defDEF
4	4 ghiGHI
5	5 jklJKL
6	6 mnoMNO
7	7 pqrsPQRS
8	8 tuvTUV
9	9 wxyzWXYZ
0	0 .@ "space"
*	*
#	#

How to enter or change setting

 
Use the buttons in the front panel for menu function navigation. Go to the option you want to setup. Then follow steps described below to enter or change the setting,

1. Press one time, the title will start flashing. You may enter new setting from phone keypad now.
2. Press button again. The title will stop flashing. The new value has been store in memory temporarily. You may go to the next setting.
3. After all the settings has been setup, please press one or two times until the screen displays "Update Setup". All the setting will be saved permanently.


Please refer to instructions in the next page for "Quick Setting" operation.

Setup Quick Configuration

1 Press **▼ DOWN** button at standby state to enter **setup mode**.



 2 Press **▶ NEXT** button until you see **System Setting** option. Press **▼ DOWN** to enter **System Setting** menu.




3 Subject to your broadband environment there are three options up to your choice in **IP Policy: Static IP, DHCP, and ADSL PPPoE**. Please make sure the one you choose meet your requirement. Press **▶ NEXT** or **◀ BACK** to navigate between the three options, Press **▼ DOWN** to make your choice.



▼ DOWN

 
Skip to option "Station ID"




▼ DOWN

Normally set to 1

 
Idle time to shut down Internet connection. 0 means always online.



▼ DOWN

 

▼ DOWN

 


▼ DOWN




Skip to option "Station ID"



 
▼ DOWN



▼ DOWN

 


▼ DOWN

 

▼ DOWN



 ▼ DOWN




Enter Secondary DNS IP address or Leave it blank


4 Enter **Station ID**. Normally set to 1



 
5 Press **▼ DOWN** to enter **Gatekeeper**. **AUTO** is applicable most of the time.



 6 Press **▼ DOWN** to enter **Country Code**. Enter your telephone country code



 
7 Press **▼ DOWN** to enter **Area Code**. Enter local telephone domestic area code



8 Press **▼ DOWN** to enter **IDD Prefix**. It is used for dialing international call. "00" in most cases



 
9 Press **▼ DOWN** to enter **2nd IDD Prefix**. Leave it blank unless you are in USA.




10 Press **▼ DOWN** button to enter **DDD Prefix**. It is used for dialing domestic and local call. "0" in most cases



 
11 You may skip the rest of options. Press **▲ UP** to return to top of **System Setting** menu.



 12 Press **▲ UP** button to save configuration data in memory




 13 It will return to standby state again after updated. Please restart the device to make setup changes effective.



Start Making VoIP Call

 The device is ready to use in standby state when the blue **ON LINE** led on. You can pick up phone and dial Internet phone call now.



You may check up your credit by pressing **▲ UP** in standby state. It will show balance left in your account. You can make phone call in this state, too.

