

BESTip ATA GSM Quick Start Manual


Requirements:

Before making any call from your BESTip ATA, you need the following items:

1. A GSM SIM Card.
2. A 110/220V AC electrical outlet.
3. A valid Internet connection.

Connection:

Please refer to the diagram below for the typical connection.

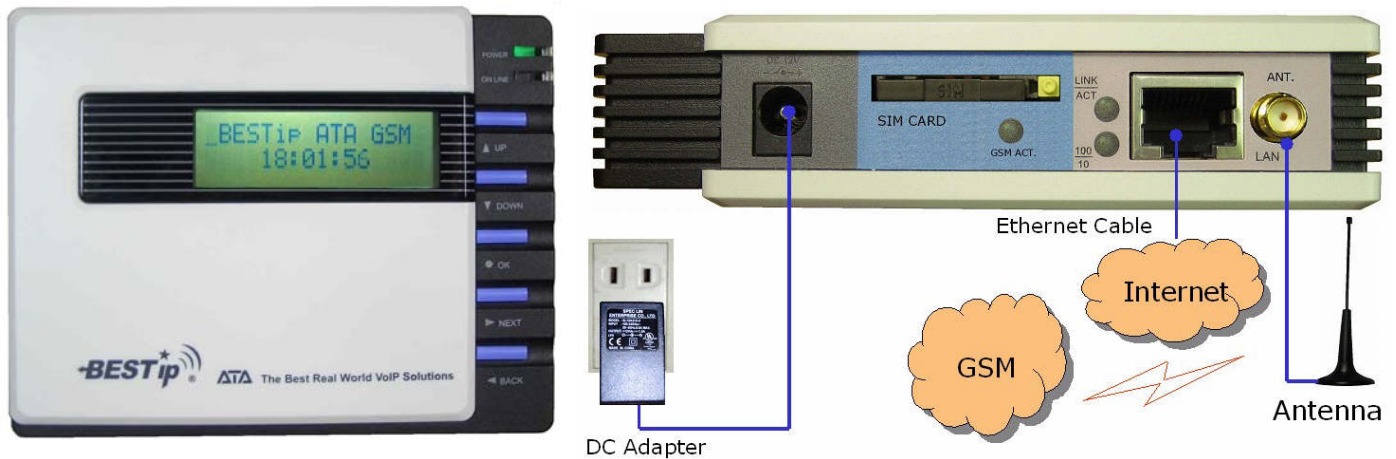

Buttons at front panel

Before making phone call, you must configure and connect ATA GSM properly. Please enter your Internet information with BESTip ATA's buttons.

How to enter or change setting from front panel

Use the buttons in the front panel for menu function navigation. Go to the option you want to setup. Then follow steps described below to enter or change the setting,

1. Press **OK** one time, the title will start flashing. You may enter new setting, using **UP** and **DOWN** for choosing number or alpha character, using **NEXT** and **BACK** for moving cursor.
2. Press **OK** button again. The title will stop flashing. The new value has been store in memory temporarily. You may go to the next setting.
3. After all the settings has been setup, please press **UP** one or two times until the screen displays "Update Setup". All the setting will be saved permanently.

Please check GSM operation status before make any call

 
The rear panel "GSM Act." indicator beneath SIM card tray indicates operational status of the built-in GSM module. Please see explanation of "GSM Act" status below,

1. ON or OFF steady : The GSM/SIM is not in operational state. Please wait for a while for it to become in operational state.
2. Slow blinking : The GSM/SIM is in operational state.
3. Fast blinking : The GSM/SIM is in operational state and has call on-going.


Please refer to instructions in the next page for "Quick Setting" operation.

Setup Quick Configuration


- 1** Press **▼ DOWN** button at standby state to enter **setup mode**.



 - 2** Press **▶ NEXT** button until you see **System Setting** option. Press **▼ DOWN** to enter **System Setting** menu.




 - 3** Subject to your broadband environment there are three options up to your choice in **IP Policy: Static IP, DHCP, and ADSL PPPoE**. Please make sure the one you choose meet your requirement. Press **▶ NEXT** or **◀ BACK** to navigate between the three options, Press **▼ DOWN** to make your choice.



▼ DOWN

 
Skip to option "Station ID"




▼ DOWN

Normally set to 1

 
Idle time to shut down Internet connection. 0 means always online.



▼ DOWN

 

▼ DOWN

 


▼ DOWN




Skip to option "Station ID"



 
▼ DOWN




▼ DOWN

 


▼ DOWN

 

▼ DOWN

 

▼ DOWN

 


Enter Secondary DNS IP address or Leave it blank


- 4** Enter **Station ID**. Normally set to 1



 
- 5** Press **▼ DOWN** to enter **Gatekeeper**. **AUTO** is applicable most of the time.



 - 6** Press **▼ DOWN** to enter **Country Code**. Enter your telephone country code



 
- 7** Press **▼ DOWN** to enter **Area Code**. Enter local telephone domestic area code



- 8** Press **▼ DOWN** to enter **IDD Prefix**. It is used for dialing international call. "00" in most cases



 
- 9** Press **▼ DOWN** to enter **2nd IDD Prefix**. Leave it blank unless you are in USA.




- 10** Press **▼ DOWN** button to enter **DDD Prefix**. It is used for dialing domestic and local call. "0" in most cases



 
- 11** You may skip the rest of options. Press **▲ UP** to return to top of **System Setting** menu.



 - 12** Press **▲ UP** button to save configuration data in memory



 - 13** It will return to standby state again after updated. Please restart the device to make setup changes effective.



Start Making VoIP Call

The device is ready to use in standby state when the blue **ON LINE** led on. You can dial the telephone number of the connected SIM card. You will hear dial-tone once the device answer your call and dial Internet phone call, then.



You may check up your credit by pressing **▲ UP** in standby state. It will show balance left in your account. You can make phone call in this state, too.

